

The Custom Shop

at Lillian August

CMFBD01W Custom Shop Chair

C = Classic 39" Depth
MF = Modern English Arm to the Front
B = Box Back
D = Double Needle Weltless
01 = Chair
W = Wedge Leg
Overall: W32 D39 H35
Classic Seat Inside Depth: 22
Arm height: 25 Seat height: 19
Standard finish: Antique Walnut
Shown in optional finish: Modern Elm
Optional #1-BB nail trim on arms shown



LTFBE01S Custom Shop Chair

L = Luxury 42" Depth
TF = Track Arm to the Front
B = Box Back
E = English Seam Weltless
01 = Chair
S = Small Wood Base
Overall: W32 D39 H35
Luxury Seat Inside Depth: 25
Arm height: 25 Seat height: 19
Standard finish: Antique Walnut
Shown in optional finish: Mineral
Optional #1-P nail trim spaced on arms and around base shown



CTTBD82W Custom Shop Sofa

C = Classic 39" Depth
TT = Track T-Cushion
B = Box Back
D = Double Needle Weltless
82 = (2) Cushion 85" Sofa
W = Wedge Leg
Overall: W85 D39 H35
Classic Seat Inside Depth: 22
Arm height: 25 Seat height: 19
Two Seat Cushions
Standard finish: Antique Walnut
Shown in optional finish: Mineral
Standard with two 20 x 20" throw pillows
Optional #1P nail trim around base shown



LXXXE50P Custom Shop Ottoman

L = Luxury Depth 37"
X = Not Applicable
X = Not Applicable
E = English Seam Weltless
50 = Sectional Ottoman
P = Plinth Base
Overall: W37 D37 H19
Also Available: Classic Size: W34 D34
Standard finish: Antique Walnut
Shown in optional finish: Gold Leaf
Optional #1-BB nail trim spaced shown



LSFBS Custom Shop Sectional

L = Luxury Depth 42"
SF = Scallop Arm to Front
B = Box Back
D = Double Needle Weltless
S = Small Wood Base

LSFBD13S Left Arm Loveseat

W56 D42 H35
Standard with (1) 20" X 20" Throw Pillow

LXXBD15S Curved Corner

W77 D42 H35
Standard with (1) 20" X 20" Throw Pillow
X = Not Applicable

LSFBD14S Right Arm Loveseat

W56 D42 H35
Standard with (1) 20" X 20" Throw Pillow

Luxury Seat Inside Depth: 25
Arm height: 25 Seat height: 19
Standard finish: Antique Walnut
Shown in optional finish: Medium Antique



The Custom Shop


at Lillian August

It's easy to order your own custom upholstered pieces. Just follow this illustration and fill in the appropriate box with the chosen letters.


depth | arm/cushion style | back | seam | frame style | base

1

Select Depth

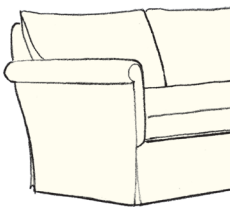

C = Classic 39"

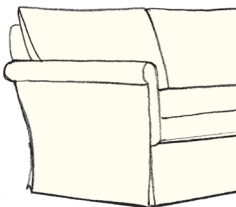

L = Luxury 42"

Custom Shop Standards:


Loose Pillow Back
Height: 35"
Arm Height: 25"

Seat Height: 19"
Classic Seat Depth: 22"
Luxury Seat Depth: 25"


2

Select Arm/Cushion Style


Arm to the Front

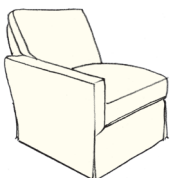


TF - Track Front

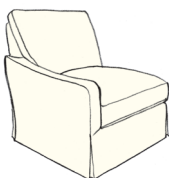


MF - Modern English Front

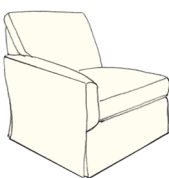

CF - Cresnet Front

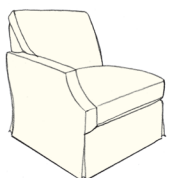


SF - Scallop Front

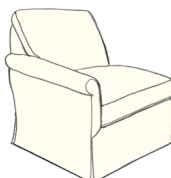


RF - Rolled Front


T-Cushion Arm

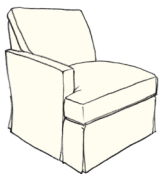


TT - Track T-Cushion

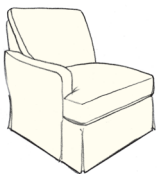


MT - Modern English T-Cushion

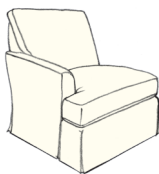

CT - Crescent T-Cushion

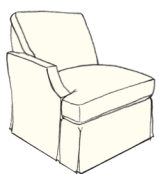


ST - Scallop T-Cushion

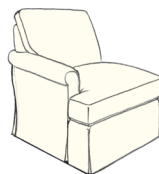


RT - Rolled T-Cushion

3

Select Back Style

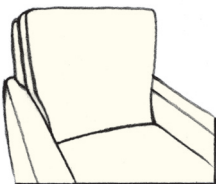


B - Box Back

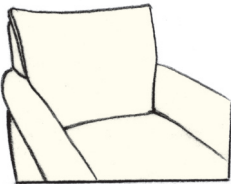


K - Knife Edge

4


Select Seam

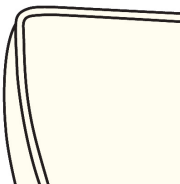

W = Welt

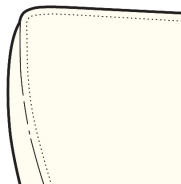

E = English Seam Weltless

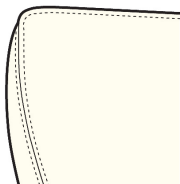


D = Double Needle Weltless


5

Select Frame Style


1/4" = 1' Scale (Approximate)

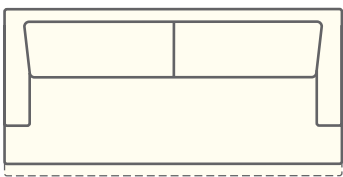


81 = 1 Cushion
85"W

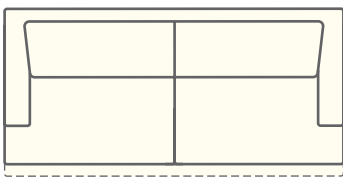


82 = 2 Cushion
85"W

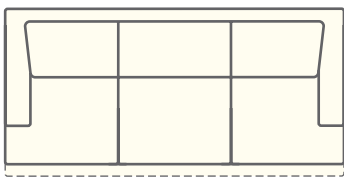


83 = 3 Cushion
85"W

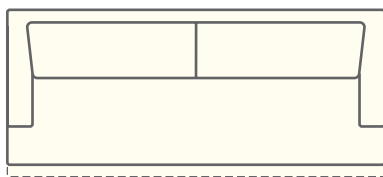


91 = 1 Cushion
95"W

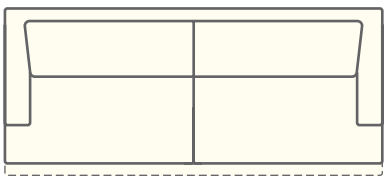


92 = 2 Cushion
95"W

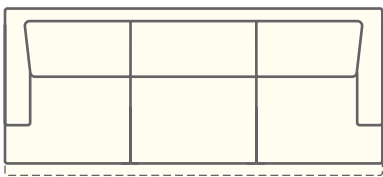


93 = 3 Cushion
95"W

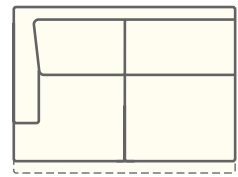


13 = Left Arm Loveseat
56"W

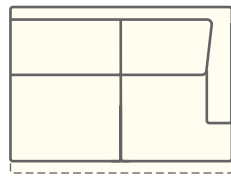


14 = Right Arm Loveseat
56"W

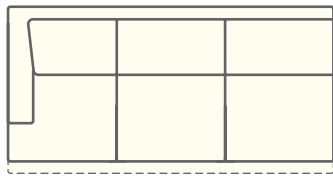


31 = Left Arm Sofa
82"W

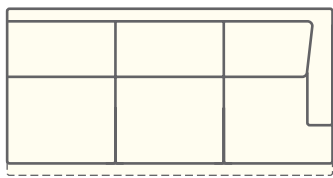

32 = Right Arm Sofa
82"W

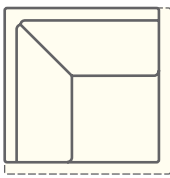

17 = Corner Chair

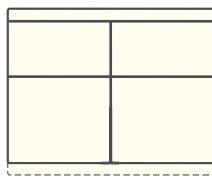


18 = Armless Loveseat
52"W



33 = Left Arm Corner Sofa
94 / 98"W



34 = Right Arm Corner Sofa
94 / 98"W

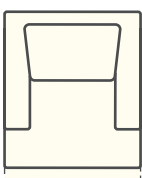


01 = Chair
32 / 35"W*



20 = Ottoman
29"W 19"D




C50 = Ottoman
34"W 34"D

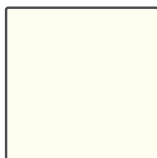

L50 = Ottoman
37"W 37"D

*01 - Chair Widths:
Track, English & Scallop Arm = 32"
Crescent & Roll Arm are wider = 35"


Sectional Ottomans:
Width Matches Depth Selected

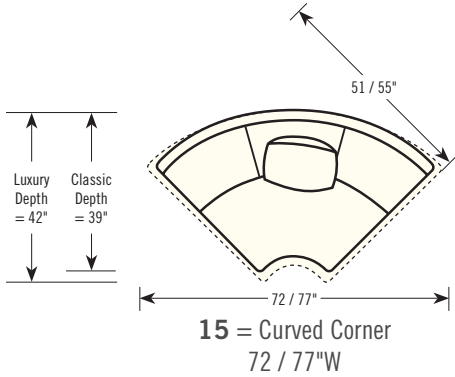


15 = Curved Corner
72 / 77"W

6


Select Base

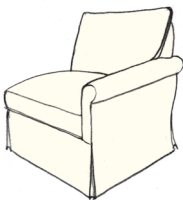

D - Dressmaker

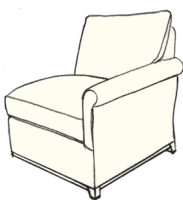


S - Small Wood

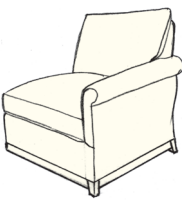


L - Large Wood



R - Reeded

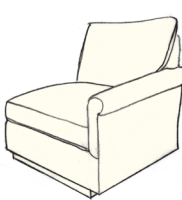

P - Plinth

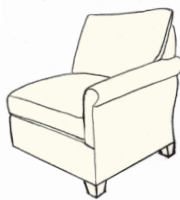

W - Wedge